

# Fire Alarm Operation

## Fire Detection

- Fire LED (red).
- Buzzer active.
- Fire relay active.

## Automatic Activation Sequence (if enabled)

- Fire detected.
- Activation delay begins.
- Activation LED blinks.
- Warning devices activate.
- Aerosol discharge occurs after delay.

## Manual Activation Procedure

- Press and hold both activation buttons simultaneously for  $\geq 3$  seconds.
- Activation delay begins.
- Activation LED blinks.
- Warning devices activate.
- Aerosol discharge occurs after delay.

## Hold/Cancel

- Delay time can be hold if button is pressed.
- Cancel activation by pressing button  $\geq 20$  seconds.

## Ventilation Shutdown and Restart

- Ventilation OFF during activation.
- Restart ventilation manually when safe.

## After a Fire Event

- Restart ventilation.
- Confirm fire extinguished.
- Technician inspection required.

## Sticker, user quick guide

- The sticker, enclosed to the FS10 Main Unit, gives a quick introduction to the user of the FS10 Main Unit.
- It is recommended to setup the sticker next to the FS10 Main Unit, making all able to use the FS10 Main Unit in an emergency situation.
- Sticker:  
Et billede, der indeholder tekst, skærmbillede, Font/skrifttype, menu AI-genereret indhold kan v

---

Revision #2

Created 2026-04-29 11:00:54 CEST by Admin

Updated 2026-04-29 11:01:39 CEST by Admin